
## Installing the lock

Install the iLOQ C10P.1 lock cylinder according to the examples presented in the figures. The installation equipment and method may vary, depending on the used lock body and escutcheons. When installing the lock, pay attention to the following:

- The maximum length of cylinder installation screws is 6 mm (see the figure below). Applying a too long screw penetrates the back plate of the lock cylinder. This breaks the lock cylinder.
- Align the cylinder front with the escutcheon front.

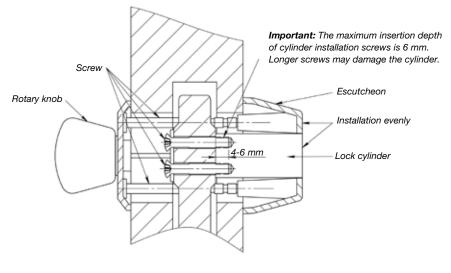


 
Lock cylinder, escutcheon and door

 If needed, insert adjustment parts between the lock cylinder and the lock body to adjust the cylinder height.


When using adjustment parts, you must replace the cylinder rotary bar for a longer one (cut the bar according to the number of used adjustment parts).

• Apply only moderate force when screwing in cylinder screws (max. 2..3 Nm).

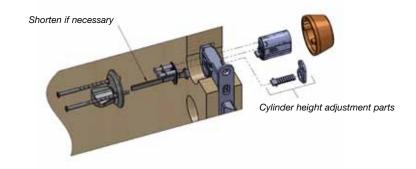



Position the cylinder and escutcheon surfaces evenly. If needed, use cylinder height adjustment parts.

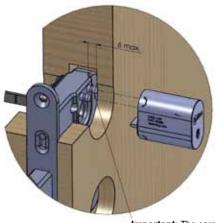

**Important:** The screw length must not exceed 6 mm. Longer screws break the lock cylinder.